

Introduction

The scheduled maintenance information included in this supplement is provided as a guide to assist you in getting the greatest ownership value from your Toyota, while helping to maximize its performance, safety, and reliability. In addition to scheduled maintenance, your Toyota also requires ongoing general maintenance which includes checking fluid levels and simple visual inspections for potential signs of trouble. These items are explained separately in the “General Maintenance” section of your *Owner’s Manual*.

How much scheduled maintenance **your** Toyota requires depends on how you drive, as well as the environmental conditions in which you drive. The demands on vehicles can vary significantly depending on the driver, driving conditions, and geographic location. The following pages will assist you in determining the proper amount of maintenance for your Toyota so that you won’t have to pay for more maintenance than your Toyota needs. **Note:** Failure to properly maintain your vehicle can result in your warranty being voided either in whole or in part; please refer to the “New Vehicle Limited Warranty – Owner’s Responsibilities” section of this supplement for details.

The Scheduled Maintenance Log beginning on page 34 of this supplement allows you to easily identify the maintenance requirements at each mileage (or month) interval, while also providing you with a convenient place to document your vehicle’s maintenance history. Properly maintaining your Toyota and documenting its maintenance history can also help increase its resale value.

How to Follow the Scheduled Maintenance Log

Oil Change Intervals

The Scheduled Maintenance Log has been designed to provide you with the flexibility to follow either 5,000-mile or 7,500-mile oil change intervals depending on your circumstances.

- Use **5,000-mile** oil change intervals to help ensure proper engine lubrication under most driving conditions or if you **primarily** operate your Toyota under the “Special Operating Conditions” described on page 30.

- Use **7,500-mile** oil change intervals if you **primarily** operate your Toyota under light, non-commercial duty for distances greater than five miles in temperate climates (above freezing and below 90° F).

If you choose **5,000-mile** oil change intervals, simply follow the instructions printed in the non-shaded boxes as shown in this example:

5,000 MILES

If you choose **7,500-mile** oil change intervals, simply follow the instructions printed in the shaded boxes as shown in this example:

7,500 MILES

The **5,000-** and **7,500-mile** intervals coincide at 15,000-mile increments; therefore, both the shaded and non-shaded boxes are shown as in this example:

15,000 MILES

SCHEDULED MAINTENANCE

30

Additional Maintenance Items for “Special Operating Conditions”

To assist you in getting the greatest ownership value from your Toyota, the Scheduled Maintenance Log separates the basic maintenance item requirements for most vehicles from the additional maintenance item requirements for vehicles that operate under more demanding “Special Operating Conditions.”

For the majority of owners who operate their Toyotas for personal use under normal conditions, the basic maintenance items listed in the upper section of the maintenance box should provide all the maintenance your Toyota needs. If you operate your Toyota **primarily** in any of the more demanding “Special Operating Conditions” listed in the next column, you should have the additional maintenance items indicated in the maintenance box performed on your Toyota. If you only **occasionally** operate your vehicle under these conditions, it is **not** necessary to perform the additional maintenance items.

Note: If you meet the requirements for 7,500-mile oil change intervals as indicated in the previous section, your Toyota should **not** require the additional maintenance items.

Special Operating Conditions:

1. Towing a trailer or using a camper or car-top carrier.
2. Repeated short trips of less than five miles in temperatures below freezing.
3. Extensive idling or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, or patrol car.
4. Operating on rough, muddy, or salt-covered roads.
5. Operating on unpaved or dusty roads.

Note: Whenever you drive off-road through deep sand, mud, or water, check the following items daily and perform maintenance or repair as required: (4Runner, RAV4, Tacoma [4WD], T100 [4WD])

- Brake pads and discs
- Brake linings and drums
- Brake lines and hoses
- Transmission, transfer, and differential oil/fluid
- Wheel bearings
- Steering linkage and boots
- Air cleaner filter
- Grease the propeller shafts daily when you drive off-road through sand, mud, or water (4WD, except RAV4).

Explanation of Scheduled Maintenance Items

The following explanations are provided to give you a greater awareness and understanding of the individual maintenance items that should be performed on your Toyota to help ensure long life and top operating condition. The Scheduled Maintenance Log in the next section of this supplement identifies which of these maintenance items should be performed at each mileage/ month interval.

Engine Components and Emission Control Systems

Timing Belt (not applicable to T100/Tacoma/4Runner with 4 Cyl.)

If the vehicle is operated under extensive idling or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, or patrol car, replace the timing belt every 90,000 miles. A qualified technician should perform this operation.

Valve Clearance

Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. A qualified technician should perform this operation.

Drive Belts

Inspect the drive belts for cracks, excessive wear, or oiliness. Replace the belts if damaged, and check the belt tension and adjust it if necessary. After inspection at 60,000 miles or 48 months, inspect every 15,000 miles or 12 months.

Engine Oil and Oil Filter

Change the engine oil and oil filter when scheduled. Use API SH, Energy-Conserving II multigrade engine oil, or ILSAC multigrade engine oil. For recommended viscosity, please refer to your *Owner's Manual*.

Engine Coolant

Drain and flush the cooling system when scheduled. Refill only with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler, and hangers for cracks, deterioration, or damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Engine Air Filter

Replace the engine air cleaner filter when scheduled.

Fuel Lines and Connections, Fuel Tank Vapor Vent System Hoses, and Fuel Tank Band

Visually inspect the lines, connections, hoses, and tank band for corrosion, damage, cracks, and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect the fuel tank cap gasket for cracks, deterioration, or damage and replace if necessary.

SCHEDULED MAINTENANCE

32

Spark Plugs

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Charcoal Canister

Inspect for internal damage or clogging every 60,000 miles or 72 months. Clean with compressed air or replace if necessary. A qualified technician should perform this operation.

Chassis and Body

Tire Rotation

To equalize tire wear and help extend tire life, Toyota recommends that you rotate your tires every 5,000 to 7,500 miles. However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.

Brake Linings (shoes and pads), Drums, and Discs

Check the brake linings (shoes) and drums for scoring, burning, leaking fluid, broken parts, and excessive wear. Check the pads for excessive wear and discs for runout and wear, and leaking fluid. A qualified technician should perform this operation.

Brake Lines and Hoses

Visually check for proper installation. Check for chafing, cracks, deterioration, and any evidence of leaking. Replace any deteriorated or damaged parts immediately. A qualified technician should perform these operations.

Steering Linkage

With the vehicle stopped, check for excessive freeplay in the steering wheel. Check the linkage for bending or damage. Check the dust boots (if so equipped) for deterioration, cracks, or damage. Check the linkage for bending or damage. Replace any damaged parts.

SRS Air Bags

After initial inspection at 120 months from the manufacture date on the certification label, inspect every 24 months. A qualified technician should perform this operation.

Steering Gear Box

Inspect the steering gear box and rack and pinion assemblies (if so equipped) for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness or damage. Check all dust covers for deterioration or damage. A qualified technician should perform this operation.

Drive Shaft Boots

Check the drive shaft(s) boots and clamps for cracks, deterioration, or damage. Replace any damaged parts and, if necessary, repack the grease. For 4Runner, RAV4, Tacoma, and T100 (4WD), also re-torque the flange bolts. A qualified technician should perform these operations.

Manual Transmission and Transfer Oil

Inspect each component for signs of leakage when scheduled. If you discover any leakage, have it repaired by a qualified technician immediately. If the vehicle is operated under the “Special Operating Conditions” defined on page 30 of this supplement, change the oil when scheduled.

Automatic Transmission, Transfer, and Differential Oil

For RAV4, inspect each component for signs of leakage when scheduled. If you discover any leakage, have it repaired by a qualified technician immediately.

For vehicles except RAV4, inspect each component for correct fluid or oil level, and replenish if necessary.

For all models, if the vehicle is operated under the “Special Operating Conditions” defined on page 30 of this supplement, change the oil when scheduled.

Limited-Slip Differential Oil

Inspect every 15,000 miles or 12 months. Replace every 60,000 miles or 48 months. A qualified technician should perform this operation.

Wheel Bearing and Drive Shaft Bushing Grease

Repack the wheel bearings with wheel bearing grease and front drive shaft bushings with molybdenum-disulfide lithium-base chassis grease.

Steering Knuckle Grease

Repack the steering knuckles with molybdenum-disulfide lithium-base chassis grease. After submerged, be sure to apply grease within 24 hours regardless of the maintenance intervals.

For Tacoma, 4Runner, and T100, lubricate the propeller shaft(s) spiders and slide yokes with lithium-base chassis grease and the double cardan joint with molybdenum-disulfide lithium base chassis grease, and retorque the flange bolts. Be sure to lubricate within 24 hours after submerged regardless of the maintenance intervals.

Bolts and Nuts on Chassis and Body

If the vehicle is operated under the “Special Operating Conditions” defined on page 30 of this supplement, re-tighten the seat mounting bolts and front and rear suspension member retaining bolts to specified torque.

MAINTENANCE LOG

5,000 Miles or 4 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____



10,000 Miles or 8 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

7,500 Miles or 6 Months*

Replace engine oil and oil filter
 Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



15,000 Miles or 12 Months*

15,000 Miles or 12 Months*

- Replace engine oil and oil filter
- Rotate tires
- Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
- Inspect the following:
 - __ Exhaust pipes and mountings __ Drive shaft boots (re-torque flange bolts)
 - __ Brake: linings, discs/drums, lines, hoses (RAV4 and all 4WD)
 - __ Steering linkages __ Limited-slip differential oil (RAV4)
 - __ Steering gear box for leakage __ Automatic transmission and
 - __ Ball joints and dust covers differential oil

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- Inspect air filter
- Replace automatic transmission and differential oil
- Inspect body/chassis nuts and bolts

Dealer Service Verification

Date: _____

Mileage: _____

MAINTENANCE LOG

20,000 Miles or 16 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

25,000 Miles or 20 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

22,500 Miles or 18 Months*

Replace engine oil and oil filter
 Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



30,000 Miles or 24 Months*	
30,000 Miles or 24 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace non-platinum spark plugs (except RAV4) ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Inspect the following: ___ Drive belts (non-ribbed) ___ Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band ___ Fuel tank cap gasket ___ Exhaust pipes and mountings ___ Brake: linings, discs/drums, lines, hoses	<input type="checkbox"/> Repack front wheel bearings (except RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (4WD T100 and 4WD Tacoma without ADD) ___ Steering linkages ___ Steering gear box for leakage ___ Ball joints and dust covers ___ Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD) ___ Transmission, transfer, and differential oil ___ Limited-slip differential oil (RAV4)
<p><i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p><i>Dealer Service Verification</i></p> </div> <div style="margin-left: 200px; margin-top: 10px;"> <p>Date: _____</p> <p>Mileage: _____</p> </div>	

¹ Maintenance service is required under the terms of the Emission Control Warranty.

MAINTENANCE LOG

35,000 Miles or 28 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	(RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____



40,000 Miles or 32 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	(RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

37,500 Miles or 30 Months*

Replace engine oil and oil filter
 Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



45,000 Miles or 36 Months*										
45,000 Miles or 36 Months*										
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">__ Exhaust pipes and mountings</td> <td style="width: 50%;">__ Drive shaft boots (re-torque flange bolts)</td> </tr> <tr> <td>__ Brake: linings, discs/drums, lines, hoses</td> <td>(RAV4 and all 4WD)</td> </tr> <tr> <td>__ Steering linkages</td> <td>__ Automatic transmission and differential oil</td> </tr> <tr> <td>__ Steering gear box for leakage</td> <td>__ Limited-slip differential oil (RAV4)</td> </tr> <tr> <td>__ Ball joints and dust covers</td> <td></td> </tr> </table>	__ Exhaust pipes and mountings	__ Drive shaft boots (re-torque flange bolts)	__ Brake: linings, discs/drums, lines, hoses	(RAV4 and all 4WD)	__ Steering linkages	__ Automatic transmission and differential oil	__ Steering gear box for leakage	__ Limited-slip differential oil (RAV4)	__ Ball joints and dust covers	
__ Exhaust pipes and mountings	__ Drive shaft boots (re-torque flange bolts)									
__ Brake: linings, discs/drums, lines, hoses	(RAV4 and all 4WD)									
__ Steering linkages	__ Automatic transmission and differential oil									
__ Steering gear box for leakage	__ Limited-slip differential oil (RAV4)									
__ Ball joints and dust covers										
<p><i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Inspect air filter <input type="checkbox"/> Replace automatic transmission and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts										
<table style="width: 100%; border: none;"> <tr> <td style="width: 70%; border: 1px solid black; padding: 5px;"><i>Dealer Service Verification</i></td> <td style="padding-left: 10px;">Date: _____</td> </tr> <tr> <td style="border: none;"></td> <td style="padding-left: 10px;">Mileage: _____</td> </tr> </table>	<i>Dealer Service Verification</i>	Date: _____		Mileage: _____						
<i>Dealer Service Verification</i>	Date: _____									
	Mileage: _____									

MAINTENANCE LOG

50,000 Miles or 40 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	(RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____



55,000 Miles or 44 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	(RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

52,500 Miles or 42 Months*

Replace engine oil and oil filter
 Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



60,000 Miles or 48 Months*	
60,000 Miles or 48 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace spark plugs ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: — Valves (audible inspection), adjust if necessary — Drive belts — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Charcoal canister (72 months) ²	<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (4WD T100 and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) — Exhaust pipes and mountings — Brake: linings, discs/drums, lines, hoses — Steering linkages — Steering gear box for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD) — Transmission, transfer, and differential oil
<p><i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 10px; width: fit-content; margin-bottom: 10px;"><i>Dealer Service Verification</i></div>	Date: _____ Mileage: _____

¹ Maintenance service is required under the terms of the Emission Control Warranty.

² Non-maintenance item except for CA, MA, NY.

MAINTENANCE LOG

65,000 Miles or 52 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)	
<input type="checkbox"/> Inspect the following:	
<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	<input type="checkbox"/> (RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



70,000 Miles or 56 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)	
<input type="checkbox"/> Inspect the following:	
<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	<input type="checkbox"/> (RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____

67,500 Miles or 54 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Dealer Service Verification	Date: _____
	Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



75,000 Miles or 60 Months*

75,000 Miles or 60 Months*

- Replace engine oil and oil filter
- Rotate tires
- Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
- Inspect the following:
 - __ Drive belts
 - __ Exhaust pipes and mountings
 - __ Brake: linings, discs/drums, lines, hoses
 - __ Steering linkages
 - __ Steering gear box for leakage
 - __ Ball joints and dust covers
 - __ Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD)
 - __ Limited-slip differential oil (RAV4)
 - __ Automatic transmission and differential oil

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- Inspect air filter
- Replace automatic transmission and differential oil
- Inspect body/chassis nuts and bolts

Dealer Service Verification

Date: _____

Mileage: _____

MAINTENANCE LOG

80,000 Miles or 64 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____



85,000 Miles or 68 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

82,500 Miles or 66 Months*

Replace engine oil and oil filter
 Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



90,000 Miles or 72 Months*	
90,000 Miles or 72 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace non-platinum spark plugs (except RAV4) ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: — Drive belts — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Exhaust pipes and mountings — Brake: linings, discs/drums, lines, hoses	<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (4WD T100 and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) — Steering linkages — Steering gear box for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD) — Transmission, transfer, and differential oil
<p><i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace timing belt (except T100/Tacoma/4Runner with 4 Cyl.) ² <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 5px; min-height: 40px; width: 100%;"> <p style="text-align: center; margin: 0;"><i>Dealer Service Verification</i></p> </div>	<p>Date: _____</p> <p>Mileage: _____</p>

¹ Maintenance service is required under the terms of the Emission Control Warranty.

² Timing belt replacement only required for Special Operating Condition 3 as indicated on page 30 of this supplement.

MAINTENANCE LOG

95,000 Miles or 76 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____



100,000 Miles or 80 Months*

Replace engine oil and oil filter
 Rotate tires

Additional Maintenance Items for Special Operating Conditions:
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
 Inspect the following:

— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	(RAV4 and all 4WD)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	

Dealer Service Verification

Date: _____

Mileage: _____

97,500 Miles or 78 Months*

Replace engine oil and oil filter
 Rotate tires

Dealer Service Verification

Date: _____

Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals

MAINTENANCE LOG

48

110,000 Miles or 88 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions:	
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)	
<input type="checkbox"/> Inspect the following:	
<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	<input type="checkbox"/> (RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	
Dealer Service Verification	
	Date: _____
	Mileage: _____



115,000 Miles or 92 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions:	
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)	
<input type="checkbox"/> Inspect the following:	
<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	<input type="checkbox"/> (RAV4 and all 4WD)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	
Dealer Service Verification	
	Date: _____
	Mileage: _____

112,500 Miles or 90 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Dealer Service Verification	
	Date: _____
	Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals

120,000 Miles or 96 Months*

120,000 Miles or 96 Months*

<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace spark plugs ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: ___ Valves (audible inspection, adjust if necessary) ___ Drive belts ___ Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band ___ Fuel tank cap gasket ___ Charcoal canister (144 months) ²	<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (4WD T100 and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) ___ Exhaust pipes and mountings ___ Brake: linings, discs/drums, lines, hoses ___ Steering linkages ___ Steering gear box for leakage ___ Ball joints and dust covers ___ Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD) ___ Transmission, transfer, and differential oil
---	--

Additional Maintenance Items for Special Operating Conditions:
 Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

Replace transmission, transfer, and differential oil
 Inspect body/chassis nuts and bolts

Dealer Service Verification

Date: _____

Mileage: _____

120 Months

120 Months

Inspect SRS Air Bag

Dealer Service Verification

Date: _____

Mileage: _____

¹ Maintenance service is required under the terms of the Emission Control Warranty.
² Non-maintenance item except for CA, MA, NY.

Official Toyota Service Manuals

You may prefer to do some of your own service work on your Toyota. Or, you may want to be more knowledgeable when you talk about your Toyota with the service writer or service manager at the dealership. In either case, we have the service manuals with the information you need.

A complete line of Service Manuals is available for your Toyota, including the Repair Manual, Electrical Systems Manual, Automatic Transmission/Transaxle Repair Manual, and a replacement *Owner's Manual*, if needed.

For owners who wish to perform their own maintenance and light repair, a new Do-It-Yourself Repair Manual is available for Tacoma models.

Vehicle Repair Manual

These are the same service and repair manuals used by professional technicians in Toyota dealerships throughout the U.S. They are fully illustrated and cover each of your vehicle's systems in considerable detail.

- Tune-up instructions and specifications.
- Repair procedures for all vehicle mechanical systems, e.g., brakes, engine, transmission, and chassis.

Repair Manual Supplements

- Electrical Systems Manual provides detailed electrical wiring diagrams for each electrical system in your vehicle.
- Automatic Transmission/Transaxle Repair Manual covers procedures for overhaul of the automatic transmission/transaxle of your vehicle.

Do-It-Yourself Repair Manual

- Maintenance instructions.
- Light repair procedures for commonly performed owner repairs.

Ordering Procedures

If you wish to order one or more of the manuals, simply fill out both sides of the order form, cut it out, and mail it to us, or you can phone direct. If you are in any way dissatisfied with your order, return it within 10 days for a full refund.

If you wish to place a CREDIT CARD ORDER by telephone, please have your credit card available when calling.

Only credit card orders can be accepted by phone.

Toyota Service Publications
1-800-622-2033

Model Model Year

Body Style

Vehicle I.D. Number

In-Service Date

Mileage at Delivery

Key Number

Selling Dealer's Name

Dealer Code

Name

Address

City State ZIP

Telephone

SPEEDOMETER REPLACEMENT RECORD

Speedometer Replaced on
(Date)

with Miles on the Odometer

Toyota Dealer Signature

NOTES:

NOTES:

NOTES:

NOTES:



**WE REALLY CARE ABOUT YOU –
PLEASE BUCKLE UP.**

Toyota has made a special effort to encourage use of seat belts.

Toyota belts are:

- Comfortable
- Easy to use
- Convenient

We encourage you to use your belts every time you drive.

OWNER INFORMATION CHANGE



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL


FIRST CLASS MAIL

PERMIT NO. 449

TORRANCE, CA 90509

POSTAGE WILL BE PAID BY ADDRESSEE

**DIRECT RESPONSE DEPARTMENT A207
TOYOTA MOTOR SALES USA INC
PO BOX 2991
TORRANCE CA 90509-9941**

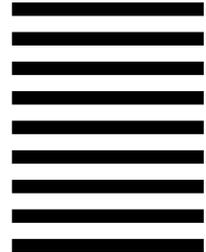

FPO

OWNER INFORMATION CHANGE

EVV

NAME/ADDRESS INFORMATION FORM

Check One:

- Same Owner, Name and/or Address Changed Same Owner, Additional Driver New Owner No Longer Have Vehicle—Sold or Traded to Individual Listed Below

Vehicle Identification Number (VIN)

Effective Date of This Information Mo. Day Year

Mr. Mrs. Ms. Miss Dr.

Individual OR Company: First Name M.I. Last Name

Company Name

Address/P.O. Box

Apt./Suite Number

City State ZIP Code

Home Telephone Number Ext.

Work Telephone Number Ext.

Social Security Number/
Customer Reference

Do not include on future mailings

OWNER INFORMATION CHANGE




NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL
FIRST CLASS MAIL PERMIT NO. 449 TORRANCE, CA 90509

POSTAGE WILL BE PAID BY ADDRESSEE

**DIRECT RESPONSE DEPARTMENT A207
TOYOTA MOTOR SALES USA INC
PO BOX 2991
TORRANCE CA 90509-9941**

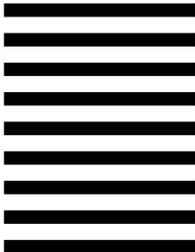

FPO